# Section 7 Navigation Window:

## **Getting Started**

#### **The Navigation Screen**

The "Fast Track" Navigation Screen displays modules for specific functions. These modules allow you to move around the program in an easy to use format.



To remove the Navigation Window uncheck the tick box on the top left hand side of the screen. To locate the Navigation Window, click on the 'Special' Menu and then 'Navigation Window'.

#### Back Up

The last 'Back Up' date will be displayed on the top right hand side of the screen. To remove the 'Back Up' date, double right click. The date will be written to the Library file.

## **Estimating Menu**



The "**Estimating menu**" is in the left top corner in navigation screen and this section shows the functions that can be performed for your estimating.

# 7.1 Estimate - Tender Number



To take out a tender number click the "**New**" button (the program finds the last number and adds 1). "**Tab**" and enter information in the field entry descriptions displayed on the window below. Each tender number is unique and can be put into five (5) different departments A, B, C, D & E and be given department names if required. (See 'Server Preferences' under 'Special' in drop down menu).

Fast Track Estin	nating System					
file Edit Estimating	g Maintenance Specia	Window Help				
Tender Number	- Date 5 OCT 2011	Current Data File :- C:\05432 RT\ES	TIMATE.DF1			_ 8 ×
9 *				F	Front Sheet Last Updated :- 18	3 NOV 2005 18:00:09 🏻 🎦
Estimate No Dep	t External Est No	Tender Description			Closing [	Date Time Date Received
150 A		Demo Estimate - Re wire city of Atl	antis		25 DEC 2	2002 22 MAY 2002
Tender Details and	Clients Information	÷			Wednes	day
Bob the Builder	(07 3208 6347) and E	arkside Building Company (0011 04	10E)			
Project Start Date	-			144	Estimated Hours Avg H	rly Rate \$ Extended \$
1 JAN 2003					1,079.47 X	67.65 = 73,026.15
Project Finish Date	-			F	Estimate Material \$ Mate	15 52 - 06 444 57
1 JUL 2003	Award Date	Contract Turns	loting	110	83,480.11 +	15.53 = 96,444.57
Estimated By	Awaru Daa	Eived Lump Sum	10		Sub Total B	ase Price \$ :- 169,470.72
Chins Hughes	ET Active Entimate	Fixed Lamp Sam			G	ST Value \$ :- 16,947.07
Successful Tender	er Active Estimate	Budget/Wining F	Price \$		Total of	PC Sums \$ :- 5,000.
Kangaroo Cons	tructions	4			Contingen	cy Sums \$ :- 2.500.
	e Bate	Price > Front S	neet 5 21 93		Calculated Price	Inc GST S :- 193 917 79
		195,5	21.33	-	I recovered to second	
		nt Sheet Project Ra	ates 🔜 🛛 Documents 🅎	Edit 🛔	New 👔 Cancel	X OK V Close 📃
Est No	Dep External Est	No Estimate Description		Closing Date	Estimated By Act	ive Date Time of Front Sheet
153	A	Trial for estimate datafile			YE	S 8 JUN 2011 15:15:05 🖷
150	A	Demo Estimate - Re wire city	/ of Atlantis	25 DEC 2002	Chris Hughes YE	S 18 NOV 2005 18:00:0
151	A 724	House Rewiring		31 MAR 2011	Jin YE	S 3 OCT 2011 11:29:02
152	A 1234	First Estimate		1 OCT 2011	YE	S 3 OCT 2011 11:17:27
		1		li in the second		

Press the **"Enter**" key or click **"OK**" to finish entering information. To change or amend information, click the **"Edit**" button. This information will be written to the C:\ drive, to the data file Estimate.df1 and then to data file Term 3.df1.

If the system is networked the information is written to the Server Computer hard disc drive shared data file Estimate.df1, all in the same process.

It is advisable to enter Descriptions, Closing Dates, Starting and Finishing Dates, and to keep the information up to date whilst the Estimate is active, as the information may be required at a later date.

The date received will automatically insert from the computers system date. The Estimator's Name, hourly rate and material mark up percentage can be overwritten if required.

When the tender number is entered for the first time it sets the estimate number to "Active", providing a view of current active estimates only. When the "Active" box is unchecked, the estimate is deactivated.

**Note:** Estimate workings are not deleted or lost when deactivated and can be reactivated at any time. It is important to deactivate estimates when not in use to keep the system tidy.

#### Build up Menu



#### **Build All Tenders**

To find all current activated and deactivated Estimates right click inside the bottom half of the screen in the Estimate Description screen and click on 'Build All Tenders'.

#### **Build Spread sheet**

To prepare a Spread sheet of the Estimates right click inside the bottom half of the screen in the Estimate Description screen and click on 'Build Spread sheet' and an Excel Spread sheet will be automatically generated.

#### **Build Active Tenders**

To find all current activated estimates right click inside the bottom half of the screen in the Estimate Description screen and click on 'Build Active Tenders'.

#### Hourly Rate and Material Mark Up %

The Hourly Rate and Material Mark Up % are inserted as pre-set rates and are stored in the Server Preferences (Refer to under Special Menu Heading). The rates are intended as a guide to give some indication of the size of the project whilst the estimate is in progress.

Hourly Rate and Material Mark Up % can be changed in this window at any time as they are not always decided until final estimate analysis and approval.

If the rates are modified, the program will put the question: **"Do you want to change all the Hourly Rates"?** If **"Yes"**, the program will automatically update all Hourly Rates and Material Mark Up %. When modified in all sections, the **Price Break Up Report** can reflect the changes. If **"No"**, the material mark ups and labour rates are left unchanged allowing individual rates in the sections.

## Edit differ Existing Record

Double click the item to be changed, loading it into the entry fields. Click "**Edit**," the record is now ready to be changes. Use the "**Tab**" key to move across or click into the field to be changed. When changes are complete click "**OK**".



Highlight the incorrect input field, click "**Cancel**" to remove.

# **M D M** To Move Up and Down

The next and previous records are available using these buttons. Click on the arrow to move one line, or the barred arrow to move to the top or bottom of the field.



The **"Find**" button works in two ways, firstly by clicking the **"Binoculars"**, the cursor will start flashing in the Tender Number field. Enter a number then **"OK"**. If the tender number is valid, the information is brought to the forefront, enabling previously deactivated tenders to be reactivated.

Secondly, by performing a right mouse click on the "**Binoculars**", the cursor will start flashing in a new window entry box. Enter a word then "**OK**". A search is carried out, matching equivalent words contained in the description and installing them into the active tender list in a highlighted form. (It is important to note that the word search is case sensitive so try upper and lower case words).

Example: To locate a previous Hospital estimate, enter the word Hospital then "**OK**". The list will be expanded with tenders containing that word, if the relevant tender is not found try typing variations on the word, such as HOSPITAL or hospital etc.

#### 🛃 Calculate Rate

To calculate an Hourly Rate some users need to use the "Front Sheet", because their overheads remain constant.

The "Calculated Price" may be \$10,000.00, however, for undefined reasons the submitted price may need to be \$9,500.00. Click the "**Calculate Rate**" button and if the Average Hourly Rate, Material Mark Up %, Estimated Hours and Material fields has values, a temporary field will appear. Enter the new base price, all values will be recalculated, rounded down to 2 decimal places and GST re-evaluated on the new price.

Should lost time and supervision hours be added in the front sheet, these costs are usually spread across the Estimate hours for price break up purposes.

To perform this function the base price is entered and total hours and materials in the estimate will be recalculated. The procedure then deducts from the submitted price, the total of materials, complete with the % mark up. The remainder is divided by the hours and a loaded hourly rate calculated and saved to the hard disc.

**Note:** If changes are made to the estimate this does not automatically recalculate the new rate.

# 7.1.1 Front Sheet Front Sheet

Highlight the required Estimate; click the "Front Sheet" button to access the front sheet. See detailed operation of this screen below.

et										
Tende	r Na	ne - House Rewiring					Tender (	Closing Date :-	31 MAR 20	11
Tende	r No	):- 151	Project Start Da	ate :- 15 M	IAR 20	10 Proje	ect Finish Date :-	15 APR 201	0	
Line	L/M	Description	Description 2	Quantity	Unit	Price \$	Material \$	Labour \$	Mat CC Lab C	C Alt CC
6.0	L	Supervisor	=Hrs.15	532.89	Hrs	91.50	<u> </u>			
1.0	м	Materials From Estimate	Subcontract \$ 0	1.00	S	258,903.60	258,903.60			<u></u>
2.0	L	Total Hours From Estimate		3,552.61	Hrs					
3.0	L	General Electrican	71.91% of Total Hrs	2,554.61	Hrs	61.50		157,108.52		
5.0	M	Utility Truck		3.00	Wks	180.00	540.00			
6.0	L	Supervisor	=Hrs.15	532.89	Hrs	91.50		48,759.44		
							050.440.00	005 007 00		¥
			C	olumn Totals of	Materia	l & Labour \$ :-	259,443.60	205,867.96		
		Weeks Dur	ation :- 4	L CP	sk on fie	ids to Change %	+ Labour + = \$ :-	405,311.50		
		Mater	ial % :- 50.69		Mate	rial Markup% :-	10.00 +	25,944.36		
		Labo	ur % :- 40.22		Lab	our Markup % :-	10.00 +	20,586.80		
plate FS	-	Pro	fit % :- 9.09			Subtot	al Base Price \$ :-	511,842.72		
mplate F	s [[					GST % :-	10.00 GST \$:-	51,184.27		
ulator 📾					Subt	otal Base Price i	ncluding GST \$ :-	563,026.99		
anator E	-						na se			

The Front Sheet enables the Estimator and Management to combine and attach the commercial structure to the project, entering profit, vehicle cost, site accommodation, communications etc.

The program allows for overhead costs and other sundry items to be applied and distributed over the project. The costs are calculated to show loaded hourly rates and overall material mark up percentage, which are automatically read into the section description.

#### Operation

Open the **"Estimating"** menu and select **"Tender Number"**. Select the estimate required. The **"Front Sheet"** button will be grey and become active when an estimated is selected. Click **"Front Sheet"** button, a search and re-calculation of the estimate will occur (this may take a few seconds in large estimates).

The accumulated values are added to the top of the list field, Line 1 Material and Line 2 Labour content in hours from the estimate. The values are recalculated every time the window is opened.

When opening this window, **ensure that the estimate is very nearly complete** (possibly containing budget prices for some items).

Information in this window is displayed in the following columns (Fields):

To enter **Site Accommodation** into the "Front Sheet", e.g. a lunch room costing \$150.00/week to hire for a period of 52 weeks, plus \$400.00 to transport.

Click "**New**" and enter the letter "**M**" in the Labour/Material field. "**Tab**" to the next field, enter "Lunch Room Delivery/Pickup Charge", "**Tab**" to the unit field and Enter "**Lot**". "**Tab**" and enter the "\$400.00" fee into the Price field, click "**OK**" or "**Enter**". The record is now entered to the database.

Repeat the above process, typing "Lunch Room Hire", Quantity "**52**", Unit as "**Wks**", and price "\$150.00". This is also added to the database.

To enter **Supervision Allowance** (allowing 144 supervisory hours), repeat the above process entering the letter "L", then "Supervision", Quantity "144", Unit as "hrs" and the hourly rate in dollars. This is also recorded in the database.

The above information gives a general idea of how to construct your front sheet. The next step is to add some profit. At the bottom of the window there are **Material Mark Up %** and **Labour Mark Up %** fields. Click on these fields to directly enter the % fields mark ups, click **"Ok"** to extend the entries.

Line Number	Differentiates between lines and is allocated when a new line is added. The line number comes from adding 1 to the last number.
Character	This field can have 3 values, L = Labour, M = Material and * = for comment. This determines the column in which the value of information is to be displayed, if "*" is placed in the field, the values are not placed in any column.
Description	The item description.
Description 2	Reinforces or gives more space to the description, also has extra functions (Referred to later).
Quantity	Quantity, for example: - 2 Wks (Weeks)
Rate	Unit, for example: - Weeks, each, Lot etc. Entry of information is not mandatory.
Price	Insert hourly rates here to be converted into dollars, e.g. the base hourly rate for tradesman etc.

#### Other Features



To save the current "Front Sheet" to use as a template for future estimates, determine the most commonly used items, enter them without values and save them. You can always add specialised items to tenders when required.



Click on this button to install the template and saved Front Sheet.

**CAUTION:** The same Front sheet will be reinstalled each time the button is clicked.



Click this button to bring up the standard Windows calculator, if it was installed with your operating system. If the calculator has already been used and is lying below the active program, a message screen will appear, prompting "Alt + Tab" keyboard function to bring it to the front of the active window.

#### Comment

Click on this button to open a window so comments on front sheet can be added and stored with the estimate.

If preformatted comment are required such as Quality insurance statements, they can be automatically read in, therefore saving time consuming typing.

This works by placing a text file called "FontSheetCom.txt" adjacent to the "Omnis.exe" file, in the "C:\Program Files\OS33RT" folder.

The process works when the window opens, it then checks to see if the field has been populated already. If not, then a procedure runs opening the above mentioned text file and reads the contents into the window field, and then closes the text file.

When the window is closed the comment is saved.

The comment is then printed out as part of the front sheet reports.

The text file can be constructed in Microsoft "Note Pad or Word Pad" A maximum of 750 Characters can be used for this purpose.

## Calculation

This adds the contents together of the selected lines, so quick calculations can be performed.

Prints the Font Sheet as displayed plus comments to Fast Track print. With a right mouse click a Microsoft Excel report is also generated so it can be emailed away for remote approval.

Insert This functions allows for lines to inserted between other existing lines with the exception of reserved lines 1 to 3.9.

**Close** - Closes out of the Front Sheet window, and in doing so preforms necessary calculations and updates the Tender Number details and also updates the Estimate Section details.

#### Auto Update Hours

If the exact text is added to the second description column of "=Hrs", the hours in the quantity column automatically update. This covers last minute items being added to the estimate.

If a percentage of hours is used, e.g. lost time might be 18% of total hours, this can be expressed as a factor, as follows, "=Hrs.18 " = 18%

#### Auto Update Materials

If the exact text is added to the second description column of "=Mat", the materials in the quantity column are automatically update. This covers last minute items being added to the estimate.

If a percentage of material is used, e.g. job insurance might be needed to be applied at a rate of 2.5% of total material, this can be expressed as a factor, as follows, "=Mat.025 " = 2.5%

#### **Cost Centres Material, Labour and Alternate**

The front sheet will also allow for the above mention cost centres to be added to the Front Sheet, the same way they are applied to the estimate sections.

If you are unsure of a Cost Centre you can do a right click on the field area, when in the entry mode.

This will open a splash window displaying a list of the appropriate cost centres, so the correct one can be selected and added to your current field.

#### Network Feature

With a network, another user can open the Front Sheet and view the contents, **but cannot modify it**. The originator of the Tender Number is the only person who can modify the tender "**Front Sheet**", as

any modifications made to Estimate workings would not be reflected in the Front Sheet and errors could result.

Should another user want to participate in the assembly, the originator opens the Front Sheet and then both can view the assembly or modifications on their computer and communicate over the phone. The window will refresh every 20 seconds reflecting any changes.

#### PC and Contingency Sums

When these values are entered they are taken as totals of PC and Contingency Sums and considered to be estimates only to be expended as directed in the contract. Usually these costs must be submitted to the principle or client for approval before they can be expended.

Therefore PC and Contingency Sums are not included in GST calculations, as they may not be expended in the course of the contract. The tenderers commercial conditions should contain a statement similar to the following: "GST has not been included on PC and Contingency Sums".

Should the client require the final price to include GST in the PC and Contingency Sums, mark up by the current GST value and change the figures. If PC and Contingency Sums mark ups are to be spread across the section prices, i.e. included in the total price, refer to the Front Sheet.

Mark up PC and Contingency Sums using the "**Front Sheet**" by adding lines in and splitting the cost over labour and material. Profit on Material and Labour can also be done this way.

#### Be careful not to double up by applying profit on profit.

## 7.1.2 Project Rates Project Rates

Many projects have special allowances and different working hours so there is a need to document, compile and produce an hourly rate to be used in the Front Sheet. See detailed operation of this screen in below.

Fast Track Estimating System	enance Special Window Help						_ # ×
							_ 8 ×
2 1025 Estimate Spare	3						
Class No. Description of Cla	- cification	Aux Data Hr E	Houro Fr				
3.0 Electrican	ssilication	Avg Rate Firs					
3.1 Engineer		105.00	0.000				
3.2		0.00	0.000				
3.4		0.00	0.000				
3.5 3.6 Tealady		0.00	0.000				
3.7		0.00	0.000				
3.8		0.00	0.000	La shell T an ala			
0.0		0.00	0.000	: Install Temple			
				Add Classification	Name 🛔		
				Edit Classification	Name 😡		
				-			
		Ŧ					
Line No Description of Rate	Unit	Quantity Facto	r Rate \$	Extended Rate \$	Notes		
						<u> </u>	
						-	
				?			
Copy Setup 💁 Paste S	etup 🔚			Delete L	ine 💼 EditLine 📩	Add Line *	OK ✓ Cancel X Close 🔒

The Project Rates screen is used to calculate an average hourly rate. The window provides an hourly rate for labour applicable to the project. The **Project Rates Button** is located in the Tender Number Screen.

The Project Rates Window consists of two screens, the **Summary Screen** and the **Calculation Screen**.

**The Summary Screen** displays Labour Classifications. An Estimator has an option to install template, edit the template or create a new labour classification and edit an existing classification.

Class No	Description of Classification	Avg Rate Hr \$	Hours Fa	
3.0	Electrican	95.00	3036.599 🔼	
3.1	Engineer	105.00	0.000	
3.2	Foreman	49.31	0.000	
3.3		0.00	0.000	
3.4		0.00	0.000	
3.5		0.00	0.000	
3.6	Tea Lady	135.00	0.000	
3.7		0.00	0.000	
3.8		0.00	0.000	
3.9		0.00	0.000	Install Template 🖵
				Add Classification Name 🋔
			V	Edit Classification Name 🛃

,				
	Install 1	Fempla	ate 4	<u>-</u>

Click this button to install already existing template in the Fast Track Estimating System. The template comes from the System Preferences window.

#### Add Classification Name 🛔 👘

This button enables to add a new classification name.

Edit Classification Name 🔣

Highlight the required classification in the Summary Screen and click this button to edit the classification name.

The Calculation Screen is used to calculate an average hourly rate for specific labour classification. The average hourly rate calculated in the Calculation Screen is displayed in the Summary Screen. The Average Hourly Rate calculations can be edited in this window at any time. If the information is modified, the program will automatically update an Average Hourly Rate in the Summary Screen and Front Sheet.

1		*					
Line No	Description of Rate	Unit	Quantity	Factor	Rate \$	Extended Rate \$	Notes
1	=Base Working Week	Hours	60.0	0.0000	0.00	0.00	A
2	Time	Hours	40.0	1.0000	35.00	1400.00	
3	Time * 1/2	Hours	10.0	1.5000	35.00	525.00	
4	Time * 2	Hours	10.0	2.0000	35.00	700.00	
5	Site Allowance	=Hours	60.0	1.0000	5.56	333.60	
							-
						2958.60	
						40.31	*
						49.31	J

#### Add Line 🛅

This button enables to add an average hourly rate to the classification selected from the Summary Screen. When clicking on the Add Line button for the first time,

the first line will be displayed automatically giving you an option to enter information in the fields for the second line.

Delete Line  🗑	Highlight the lines to be deleted and click "Delete Line" button.
Edit Line 🍐	Edit the Description of Rate by clicking "Edit Line" and entering the new information.
Copy Setup	This function allows copying project rates information into an Estimate via the Clipboard. quired lines and copy the information by pressing the " <b>Copy Setup</b> " button.
Paste Setup <b>base</b> inserted in the E	This function allows pasting project rates information from one Estimate to the other. Copy information into the Clipboard, click " <b>Paste Setup</b> ", and the contents will be stimate.



The intent of this window is to give the Estimator a tool to manage files specifically associated with the estimate. The window also allows for the quick and official redistribution of files via e-mail. See detailed operation of this screen in Section 7.18 and 7.18.1.

The Documents Button is located in the Tender Number Screen.

This button when it is active means that there is an active Estimate. This opens a window that allows the user or users to manage Tender electronic file information in a uniform structured manner. The electronic file information such as Specifications, Drawing, Suppliers responses and Submitted Information is located in a base folder generally in central area on server.

This way all users store the information in a pre-set file structure enabling all users to quickly retrieve information and others to store information in place known to everybody in the organization.

The reason to have such an accessory is avoid the problem where an estimator accumulates electronic files in a location known only to them, and they may be on their own hard drive. Then other people then have to work with these files, they then experience the problem of finding the location of the files. Even after a while the estimator may forget the exact location.

The other advantage is that the list of file names can quickly be turned into and Excel file make it quick generate a list of documents that then can be pasted into a word processing document.

The structure of the folders is not pre-set and is determined by the person on the network that holds the restricted password (see Atad Data). The initial set up of folder names needs some discussion however this structure can be altered at any time.

Whilst the folders can be deleted from the template at any time, the file operations will not go through and delete any folders previously created in previous templates.

#### **How it Works**



The first step is to set up the template, first change to the restricted password and then open the window called "Server Preferences ", this found under the pull down menu called 'Special".

Add the folders names when prompted and if you want to delete double click to remove lines. When finished adding all the names, click on "Apply" to save and close the window. Please remember to change back to normal password.

The Tender number is created and the estimate proceeds the electronic files come in via email etc. The user then clicks on the button, the user is asked do they want to set up a folder structure, answer yes the folder is then set up as per your previously set up template.

The procedure runs creating a new folder within the folder called "FastTrackEstAuxFiles" this folder is located and initially automatically created adjacent to the data file called "Estimate.df1".

Tender number as being the unique name relating to the tender number is created, then the sub folder established in template are located with tender number folder.

The Tender Documents window is opened.

#### 7.1.3-1 Tender Documents Window

The intent of this window is to give the Estimator a tool to manage files specifically associated with the estimate. The window also allows for the quick and official redistribution of files via e-mail.



The above graphic shows the files contained within the folder called "Drawings" by clicking on the line in the folder contents the system will open the necessary executable file and run that particular file if available.

Сору 🔯

This function copies the file from one location to the selected folder location, while leaving the other file intact. This could be a problem with QA if the file is modified in the new location and not synchronized with the other file in the old location.



This function moves the file from its location to the selected folder location. This button has a similar function as the commonly used "cut" feature in computers.



This opens a browser icon and allows other folders to be accessed on your computer or on the network so the user can build up a list of contents of folders other than the

This button will create a new main folder. Click on this button, enter a Folder Name and press OK. Folders can be deleted only by using the Windows System.





This button creates a Microsoft Excel file allowing the user to extract information from the columns.

**Email** State Track. After clicking this function the following screens will appear at the top right corner of the Main Tender Folder window.



## **E-mailing Files**



#### Attachments List (1.)

This window is used to attach files and documents to your e-mail. To populate this list, drag the selected file from the bottom table over to the Attachments List (1.) and drop. Double click to delete a file no longer required.

Τ.

Text - This button is used for inserting a short message. The message can be up to 1500 characters long.

#### **Recipients List (2.)**

Recipients List is where you drop the recipients' addresses. These addresses can be dragged from the Address Book below or entered manually.

То To (Primary Recipients) - This button opens the window (if it is not already open) for dragging the recipients' addresses from the Address Book.

CC Carbon Copy – Click this button to drag an address into Carbon Copy. This is used to e-mail attachments to secondary recipients.

BCC Blind Carbon Copy – Click this button to drag an address into Blind Carbon Copy. This is used to send the same e-mail to recipients whose addresses are not to be revealed to others.

Α

Add Address Manually – This button is for inserting an email address manually. If you want to put the person's name as part of the address, the address and the name has to be separated by comma, e.g. ataddata@bigpond.net.au, Chris Hughes.

#### Address Book (3.)

You can narrow the 'Address List' by clicking on the letters. Select and drag the address into the Recipients list (2.), which is located directly above the Address Book (3.).

Send Email Send Email

Once you have added the recipient into the Recipients List (2.), the Send Email button will be automatically activated. Click this button to proceed with sending the message. Once sent, go to the E-Mail Log window, to view a confirmation that the E-mail was sent successfully.

#### Sub window finish



When more than one user is working on the programme the Tender Number screen will refresh every 25 seconds. To disable the screen from refreshing, click the opened padlock in the top right hand corner which will lock the screen. To unlock the screen click the padlock into the opened position again.



Click the "Print" button to obtain a printout of the Estimate details on the screen. If no record is selected the "Print" button will be shown as disabled.

Click the "Close" button to return to the Estimating Menu

## 7.2 Estimate – Sections



New Sections allow the Estimate to be broken down into various Numbered Sections with Descriptions. When an Estimate number is taken out, the program automatically enters a Section Number 1 and gives it the description of "**UnNamed**", as all estimates must have at least 1 section. The program allows for up to 999 sections. The entry window allows for the optional input of schedule of rates quantities, so a schedule of rates can be produced if required (See "**Estimate** 

Reports" section for more details).

t Trac	k Estimating System				
dit <u>R</u> ep	orts Estimating Maintenance Special <u>W</u> indow <u>H</u> elp				
timate	Sections				
t No	Estimate Description	Closing Date La	b Rate \$ Mat MkUp%		
50	Demo Estimate – Re wire city of Atlantis	25 DEC 2002	67.65 15.53		
	1	L L			
untion Ma	Cust Cast Ma Description	Live Do	setilu Au Uda D⊁≢ Mat MLS		
ction No	Lust Sect No Description				
	I I Maine	lat	1 6766 1662		Best
	Switch Boards	lot	1 67.65 15.55	<u>e</u>	Past
	Lights	100	67.65 15.53		Paste
	Power		67.65 15.53		
	Power		67.65 15.53		Paste
	Mains		67.65 15.53		Co.
	Switch Boards		67.65 15.53		
	Lights		67.65 15.53		
					Su
				la l	
			/		
1					
<u>ן</u>			DDE Import 🖽	Edit 🛔 New	Tancel X 0K V

#### Operation



From the list of active estimates displayed, click the selected estimate and the sections will appear in the lower screen. To enter a section number and description, click "**New**" and enter a section number. The program checks to see if that number is unique, if not, the cursor remains on the field and alerts the operator. "**Tab**" to the "**Description**" field, type description into the field, then click "**OK**". The record is then written to the hard disc and displayed in the list below.

**Note:** The hourly rate and material mark up % are added automatically if no entry is made.



#### **Alter Existing Record**

Modifications and additions can be made to the selected Estimate sections. To change existing section numbers, description and rates, highlight the item, click "**Edit**", then "**Tab**" to the field required. Click "**OK**", and the changed details will be recorded. Double clicking on the record will also activate the edit mode.



The next and previous lines are available by clicking on the arrow to move one line or the barred arrow to move to the top or bottom of the field.

9	Print
---	-------

Click "**Print**" to obtain a printout of the Estimate sections on the screen. If no record is selected the "**Print**" button will be shown as disabled.



Highlight the lines to be deleted and click "Delete" button.

Estimate- New Sections

DDE Import 🏢

This button allows for information to be imported from excel into Fast Track section break up.

	A	В	С	D	E	F
1	Left Hand S	crew Driver Factory				
2	SectionNo	Description	Unit	Qty	A∨ Hrly Rate	Mat MarkUp %
3	150	Mains	M	10	56.50	10
4	160	Submains All Building	Lot	1	73.50	10
5	170	Switch Boards	Lot	1	48.50	10
6	180	Distribution Boards	Lot	1	85.20	10
7	105	Lights	Lot	1	95.20	10
8	111	Power	Lot	1	75.20	10
9	125	Communications	Lot	1	75.20	10
10						

In this situation, the information to be used, could come in excel or word table format. Before the import can be done, the excel spreadsheet must be formatted as per the above diagram. Once the information is in a spreadsheet, bearing in mind that fast track begins to read in row two, and ensuring that all figures in the section number column are numbers. The procedure will terminate when an empty space is encountered in the section number column. So it is important that you have no empty spaces.

Select import f	ile				? 🔀
Look jn	: 🗀 Estimate Se	ections	👻 🔇 💋	• 📼 🕫	
D Recent	Pictures Esti	mate Sections ScrwDriverFactory			
<b>S</b> Mu Computer					
eral and a second secon					
Mu Network	Files of tupe:	All Files (* *)	у	<u> </u>	

When the **DDE Import** button is clicked, the **Select Import File** menu will appear. This is where you select the Excel file that is to be imported into the Fast Track system. The file should now be linked and with an "OK" the program will run.

The information should now be imported.

Advice	
<b></b>	The "DDE " import process is now finished importing the sections.
	ОК

By pressing the ok button the information should appear in the table on the Fast Track screen. If all the information has been entered correctly into the data source, all fields will be completed and a message will come up telling you that the program has finished importing the data.

Section No	Description	Unit	Quantity	Av Hrly Rt \$	Mat Mk%		
1	Un Named						~
105	Lights	Lot	1	95.20	10.00		
111	Power	Lot	1	75.20	10.00		
125	Communications	Lot	1	75.20	10.00		
150	Mains	м	10	56.50	10.00		
160	Submains All Building	Lot	1	73.50	10.00		
170	Switch Boards	Lot	1	48.50	10.00		
180	Distribution Boards	Lot	1	85.20	10.00		
			••••••				
							$\sim$
<						>	

The information will be listed in numerical order by the section number column.

Cancel 🗙	Cancel
----------	--------

Highlight the incorrect input field, click "Cancel" to remove.

To eliminate time in entering section descriptions the following functions are included. Anything with carriage returns or line feeds can be copied and pasted with the following variations.

Paste	+0 🗳	Paste without section numbers
Paste -	+1 🖄	Paste with section numbers consecutively (by 1)
Paste -	+ # 🗳	Paste with section numbers at any intervals ie 2, 5, 10

Pastes highlighted information in the section description into another Estimate section.

[

Сору 💜

The square brackets feature is to allow sub totalling in the estimate. Should you wish 1 only Sections 3 through Section 6 be sub totalled place a [at the beginning of Section 3 and a ] at the beginning of Section 6 and these Sections will be sub totalled separately.

To remove the square brackets right click on the [or ].

#### **Features**

An hourly rate is entered into the first section when the tender number is taken out and will be entered as a default into the respective fields. Existing entries may be altered at any time if not acceptable. Sections can have different rates, as this may be a requirement of the tenders costing structure. The tender price break up report will reflect the variances.

Note: See "Tender Number" Section for all rate changes. This feature is also available in "Estimate Input - See All" screen.

## 7.3 Estimate Input

## 7.3.1 Estimate Input – Sections



This window is comprised of 4 screens, **Estimate Description**, **Section Description**, **Estimate Input Sections and Master List Headings**. Information can be entered into an estimate by two methods.

**Firstly,** manually type in non-standard items (not contained in a Master List). **Secondly,** double click items displayed in a Master List. This transfers the information from the Master List to the input fields of the selected estimate and estimate section.

stimate Input Window										
st No Estimate Description	c	Closing Date	Sect No	Alt No	Sect	ion Description	ŝ			
152 First Estimate	1	OCT 2010	1		Kitch	ien				
151 House Rewining 150 Demo Estimate - Re wire city of Atla	antis	25 DEC 2002	2		Mair	nge room bedroom				
			▼ 10		Swit	ch Boards	-			1
Est Input - Sections Est Input - S	ee All 📻 Est Input - Price Book	🗞 Est Input - Cou	unt Est Input	- Clip Boa	ard 📇	Estimate R	eports			
t Catalogue Number	Description				Unit	Quantity	Price \$ Dis%	Ext Price \$	Lab Rt	Ext Lab R
CABL-CT200ID/NT	~Cable Identification Tie 200*4.6	5 Nat			ea	20.00	0.60	12.00	0.300	6.0
SURE-GPHM20B	~Glands GPHM20B Series			······	ea	20.00	8.00	160.00	0.200	4.0
SURE-LN20	~Brass Lock Nuts 20mm				ea	20.00	1.85	37.00	0.012	0.2
SURE-SHR-1B	~Gland Acc Black Shrouds Size	e 1			ea	20.00	3.80	76.00	0.012	0.2
CABL-CAL2.5-5	~Cu Lug 2.5mm2 Cable 5mm S	itud			ea	60.00	0.97	58.20	0.200	12.0
	= beding sand(.6m*.8m*300m)				m3	144.00	35.00	5,040.00	0.250	36.0
	* Cable Tray									
EZYS-CT300G	Cable Tray Std G Cable Tray 30	)0mm			M	550.00	15.97	8,783.50	0.276	151.8
EZYS-CTER300	Cable Tray Std G External Riser	r			ea	10.00	33.17	331.70	0.264	2.6
EZYS-CTB1300	Cable Tray Std G Flat Bend				ea	15.00	33.17	497.55	0.264	3.9
	Cable Tray 300MM Brackets				ea	184.00	6.00	1,104.00	0.300	55.20
	* Cable									
OLEX-BDBP26AA001CXNA	Cable XLP 1X240 PC XLPPVC				М	2400.00	14.47	34,728.00	0.200	480.00
	* Termination 1C 240mm2					2.00				
SURE-LN40	~Brass Lock Nuts 40mm				ea	4.00	3.71	14.84	0.024	0.1
CABL-CT200ID/NT	~Cable Identification Tie 200*4.6	5 Nat			ea	4.00	0.34	1.36	0.100	0.40
SURE-SHR-4B	~Gland Acc Black Shrouds Size	e 4			ea	4.00	3.30	13.20	0.012	0.0
SURE-GPHM40	~Glands GPHM40 Series				ea	4.00	26.30	105.20	0.300	1.2
Insert 🚺 Replace 🖳	2					Section Totals	Material \$	64,224.65	Lab Hrs	1,152.74
ter List A	Catalogue No	Description					Unit Price \$ D	is % Lab Rt Ma	t.CC Lab.0	CC Lab.Cl
* TERM CABLE 1C PVC PVC NYL	CABL-CT250BK	Cable Tie 250	)*4.8mm(10')Bk				ea 0.21			3.0
APPLIANCES - WHITE GOODS	CABL-CT365BK-HD	Cable Tie 365	5*7.8mm(14')Bk				ea 0.42			
CABLE ACCESS/TIES	CABL-CT365NT-HD	Cable Tie 365	5*7.8mm(14')Na	t			ea 0.39			
CABLE DUCTING METAL	CABL-CT430BK	Cable Tie 430	*4.8mm Black				ea 0.33			
CABLE LADDER & ACCESSORIES	CABL-CT500BK-UHD	Cable Tie 500	)*12.5mm(20')E	К			ea 1.31			
CABLE LADDER STAINLESS STEE	UTIL-H31823/100	Cable Ties N	V UTI-TIE 200M	M X 4.8MM	BLACK	<	Pk 0.15			
CABLE STEEL WIRE ARMOUR	UTIL-H31822/100	Cable Ties NV	VUTI-TIES 140	VM X 3.6M	M BLAC	CK	Pk 0.11			
COND ADAPTABLE BOXES CLIPSA	UTIL-H31826/100	Cable Ties NV	VUTI-TIES 370	MM x 4.8M	M BLAC	ĸ	Pk 0.34			
CONVEYOR EQUIPMENT	THBE-TYS28	Record Delet	edSTAINLESS	STEEL CAE	BLE TIES	S - ORIGINAL L	2.98	0.096		
hConduit & Accessories	<u> </u>									

#### **Please Note:**

- When creating a new entry right clicking in the boxes labelled Mat CC, Lab CC, LabCl, or Alt CC will also produce additional menus. *Refer to section 7.2 below.*
- Area (Area Code) simply requires you to enter G = General, O = Offsite, S = Subcontract or P = Plant or leave it blank.
- Right clicking inside the main tables will access additional menus. *Refer to sections 7.3 to 7.4 below.*

#### Operation

- Select from the active list of estimates in the "Estimate Description" box. The list will automatically extend once the mouse is placed over the box and will compress when the mouse is removed from the area.
- Select the required estimate, click once to highlight, and the "Section Description" screen is activated.

• Select the required section, click once to highlight.

The "Estimate Input – Sections" screen is now activated, ready for initial input of labour and materials or alterations and additions to existing estimates.

To display the whole list, click on the down facing arrow. Once you have selected the item heading the list will retract back to normal, clicking on the arrow again will have the same result.



New Entry

Click "**New**" button, the cursor will start flashing in the entry field "**Description**". Insert information in the respective fields by typing the information in or select from the Master List. Click "**OK**" to write the entry to the hard disc. Click "**New**" to add each entry.

**Note:** Fields do not have to contain all information at this time, the "**Edit**" function can be performed at a later stage. For example: The main switchboard description can be entered, and after receipt of the best price from specialised suppliers, the "**Edit**" function is used to input the price.

Edit 🛔

#### Alter an Existing record

Click the item to be changed, click "**Edit**", the record is now ready to be changed. Use the "**TAB**" key to move across the fields or click into the field to be change. When changes are complete, click "**OK**". Note by double clicking on a record in the list this will automatically send the program into the edit mode with that record.

#### Cancel ×

Highlight the incorrect input field then click "Cancel" to remove.

# To Move Up and Down

The next and previous records are available using these buttons. Click on the arrow to move one line, or the arrow with the bar to move to the top or bottom of the table.



There are two master lists providing two locations to store estimating prices and labour rates. For multi system users this allows a standard Master List in "A" and the estimators work focus list in "B". For example: The company may have 3 estimators working on commercial and industrial projects, in which case all three (3) would have the standard "A" list and one (1) would have an instrumentation oriented "B" list.

#### Entry using a Master List

- Click "A" or "B" button to select the required Master List.
- Scroll the list of headings and highlight the required item to bring up a list of materials available under that heading.
- Highlight the required material, click "**New**" button and it will be placed in "**Estimate Input**" fields. Use the "**Tab**" key or mouse to move to the next field. If the pre-entered price, discount, tax and labour rates are acceptable, click "**OK**".

The entry is written to the hard disc and the record will appear at the top or bottom of the list dependent on the preferences. If, however, the pre-loaded information is not acceptable, overwrite using the "**Edit**" function.

# Delete

To delete multiple records in **consecutive order**, select a record in the list, click and drag with the mouse. Once the desired items are selected release the mouse and press "**Delete**" button, the selected items will be deleted. The **Delete** button also has an undo function this is instigated by right mouse and is only good for one shot. Note information deleted is not placed back in the same order, and is added at the end of the list.

**Note:** The new lines copied are placed at the bottom of the list until a redraw of the list takes place. This occurs when the number in the preferences is reached, or a **re-selection** in the combo box is double clicked. The program then sorts lines in the list into their respective section order.

## Comment Screen

By highlighting an item in the Estimate and clicking on this button the following screen will appear.

Co	mplete Rec	cord Window.		
?	Est No	Estimate Number	Section No.	
1	137	March 14th 2003 Test	25	
	Catalogue numb	per Description of item for estimate.	Unit	
	CLIP-WIPBN	M1SPML Industrial Hi-Impact Push Button Station 500	ea	
	Quantity	Price \$_Dis%_Ext Material \$_Labour Rate_ExtLab Hrs_Cost Cen_Lab	C.C. Area Cd	
	45.0	121.86 5,483.70 0.900 40.500 1	4.0	
	.Weight Kg	Surface Area m2.	Currency	
			AUD	
	Comment			
	You can pla	ce your " Comment Here" and this will be printed under the line in the Estimate Report		
			Cancel 🗙	ОК 🗸

# Complete Estimate information



This button opens a window that allows the use to see the entire estimate and allows special reports to be generated.

The Complete Estimate Information screen allows the user to view the complete estimate and allows each column to be sorted via the headed list.

This allows the user to do a variety of reports in A3 format.

For example if user was to sort on currency the window remembers the last sorted column and a report can be generated and when the currency unit changes then totals are produced.

Any column can be sorted on and any report can be generated, some reports may be useless in some situations.

A normal click prints the whole lot of the current Estimate sorted in Sections order. A Right mouse click prints the selected lines and sorts in Section order.

Calculate the totals of the selected lines by clicking on this button. Qty = Quantity, Extended Material = \$, Extended Labour Hours = Hrs, Weight = Kilograms and Surface Area = m2



This prints the Estimate in the last sorted order and gives a Subtotal when the column sorted on changes in value. See above example.

**Help -** Click the Question Mark - **"Help Button"** and a description bar will appear when any other button is activated describing the function of that particular button.

**Copy** - This copies non-consecutive selected records and places duplicates of those records at the bottom of list.

Insert - Click one of lines in estimating table, then click this button, this allow you to insert a line above the line you just select.

# 🚺 Replace

Use this function when it becomes necessary to replace an existing item, **but maintain the order of entry**. For example, an addendum is received increasing a 100mm conduit to 150mm. Click on the record to be replaced to highlight the record. It will appear in the current record box above at the top of the input screen. The "**Replace**" button will be greyed allowing the user to click.

Select from a Master List the replacement item and click. The current selected record will then be changed to the replacement record. To accept the replacement record click "**OK**'. This ensures the order of entry remains unchanged and does not place the item at the bottom of the list.

# If you do not accept use the "Cancel" button. This function can be used only with records containing Catalogue Numbers from a Master List.

It is desirable to keep the order of entry intact and this function is provided for that purpose. For example, a tender is laid out based on a 150mm conduit containing a specified number of cables and an additional cable is added. The new cable can be included without altering the order of entry.

This function takes some time to execute depending on the size of the section and position in the Estimate, **so use cautiously.** 

## Lalculation

Select a line then click this button, this button shows you the total of the selected line.

# Reorganise

This function cuts the selected lines from table of the displayed section, and holds the lines in

memory. The icon will change to double arrows, with this allows the user to select an insertion point in the table. Click on the button and the lines will be inserted into the new position order and will be written to the data file. Right click on the button to cancel the operation.

**Note:** If any sorts have been done previously in the section, this is the order that will be written to the data file and there is no undo facility.

#### **Other Functions**

#### Find by Cat No Ctrl+F

When a catalogue number is known and the item is in the "**Master List**", pull down the menu to the appropriate line and release. The cursor starts to flash in the "**Catalogue Number**" area on the screen, enter the Catalogue Number and "**OK**".

If the item is available, the full description, prices, discounts and labour rates will appear. Tab across and enter the quantity or cancel. Should there be more than one item matching the catalogue number the program will walk through the next steps.

#### - Adding Quantities Together

To add quantities, e.g. the figure of 1159 is in the Quantity field and 233 is to be added without the use of a calculator.

Highlight the item, click "**Edit**", enter the new figure of 233 in place of 1159, hold the "**Shift**" key down and "**Tab**" to the previous field. The values will be added. "**Tab**" to the next field, or use the "**enter**" key.

#### - Negative Value

A negative value can be entered by placing a minus sign in front of the value. This value will be subtracted from the total.

#### - Calculations

The description field is also capable of doing simple maths calculation and can be put into use in the following way. For example if the user wanted to calculate and display in the estimate how you came up with sand in trench enter the following.

Place the "=" as the very first character in the description field.

Example " = Fill Sand(.6Wide\*.3Deep\*180mLong) " when the field is tab out of the program will do an assessment of the calculation and if correct place the resultant in the quantity field.

#### - Quantity Record Referencing

The quantities in a record in an Estimate Section can be made to reference another record.

For example, you may have 'Distribution Boards' in various sections of your Estimate with fuses and the quantity may have to be confirmed. You can set a Master Record at the very beginning of the "description field" using square brackets [10]. The Slave Record can then be set with the same reference number using curly brackets {10}.

These may appear in numerous sections or numerous locations within a section. Once the quantity is known and entered into the Master Record the quantities in all the other records that have been referenced will also change automatically.

Est In	put - Sections	Est Input	See All	Est Input - Price Book	Est Input -	Count	Est Input -
Sect	Catalogue Nun	nber	Descript	ion		Unit	Quantity
1	NHP1-NES 63		{10} FU:	SE 63A Fuse Links BS ty	pe	EA	12.0
1	CLIP-4C17FD	WE	[10] 17	Module Consumer Swite	:hboard	ea	12.0
1	CLIP-4SW380	)	Isolatin	g Switch 80Amp 3 Pole		ea	12.0
1	CLIP-4CB110	)	Circuit	Breaker 8kA 10 Amp Cli	psal	ea	36.0
1	CLIP-4CB116	)	Circuit	Breaker 8kA 16 Amp Cli	psal	ea	48.0
1	CLIP-4CB132	)	Circuit	Breaker 8kA 32 Amp Cli	psal	ea	72.0
1	NHP1-NES 40	)	FUSE 40	A Fuse Links BS type		EA	36.0
1	NHP1-NES 63	5	{10} FU	SE 63A Fuse Links BS ty	pe	EA	12.0

#### - Subcontractors

When preparing an estimate, you can determine the total value of subcontractors in the estimate by placing a "#" in the first part of the description. A subcontract value will be displayed on the first line of the Front Sheet.

Atad Data - File:- FT-7-Sec007-V30.doc

## 7.3.1-1 Cost Centres Menus

When creating a new entry you can access the Cost Centre Menus by right clicking in the allocated cells.

Ext Lab Rt	Mat.CC	Lab.CC	LabC1	Area	<u>Alto</u>	<u>:c</u>

There's no right click menu available for Area Code, you simply need to enter G = General, O = Offsite, S = Subcontract or P = Plant or leave it blank.

Mat CC -	Material Cost Centre
Lab CC -	Labour Cost Centre
LabCI -	Labour Class Cost Centre
Area -	Area Code
Alt CC -	Alternative Cost Centre



(To add to or edit your Cost Centres refer to section 8.4)

## 7.3.1 - 2 Cost Centres



To view the Cost Centres window, right mouse click in the Cost Centre cell. This will open a window displaying the Cost Centres. Once displayed click on the Cost Centre required, this will change the Cost Centre.

## 7.3.1 - 3 Description Window Menu

To find following menu, Right click in the main description window:



#### Copy Items Est to Est

To copy from an existing estimate to another, highlight the section in the estimate to be copied. Right click the mouse button to bring up the menu, click **"Copy Items Est to Est"**, select the estimate section to receive the copy, right click description field to bring up menu, click **"Paste Items Est to Est"**.

# Note: Here and the set to the set

Once you have copied, select the appropriate section and paste the contents by releasing on this menu.

## Clear Copy Est to Est

This function could become necessary if a large portion of a section is selected and not pasted taking up considerable memory and slowing the computer. Should this happen, clear the previously selected records with this function.

To "**Sort**" your estimate by various column categories click on any of the above sort functions.

## Find on Catalogue No

If you want to find an item with the catalogue number, this function will helps you to find the item. Click the button and enter the catalogue number in full.

## Sort By Section No

Use this function if you need to sort all your estimating by Section.

# Sort by Catalogue No

Use this function if you need to sort all your estimating by Catalogue number.

# Sort by Description

Use this function if you need to sort all your estimating by Description.

# Sort by Unit

Use this function if you need to sort all your estimating by Unit.

## Sort by Price

Use this function if you need to sort all your estimating by Price.

# Sort by Extended price

Use this function if you need to sort all your estimating by Extended Price.

## Sort by Labour Rate

Use this function if you need to sort all your estimating by Labour Rate.

## Sort by Ext Labour

Use this function if you need to sort all your estimating by Extended labour rate.

## Sort by Material Cost Centre

Use this function if you need to sort all your estimating by Cost centre.

## Sort by Labour Cost Centre

Use this function if you need to sort all your estimating by Labour Cost Centre.

#### **U** Sort by Labour Class

Use this function if you need to sort all your estimating by Labour Class.

#### Sort by Area Code

Use this function if you need to sort all your estimating by Area Code.

## **F** Sort by Alternate Cost Centre

Use this function if you need to sort all your estimating by Alternate Cost Centre.

## **and** Sort by Comment

Use this function if you need to sort all your estimating by Comment.

## 7.3.1 - 4 Master List Sort and Find

Right click in the Master List description field for the menu, click the "Sort" required.

# Sort by Description Sort By Cat Number Find Contains Word Find Contains Catalogue No Show Subassembly Contents Show HTML Page

BC	Sort	by	Descr	iption
----	------	----	-------	--------

This will sort the Master List in description order.

## 💁 Sort by Cat Number

This will sort the Master List in Catalogue Number order.

# M Find Contains Word

This instigates an input panel and by typing a word, for example, "**Outlet**" and clicking the "**OK**" button, a word search is activated on the description field in the current Master List. Any matches found are then displayed in the Master List table.

# 🐔 Contains Catalogue No

You can find an item from master list by catalogue number. Right click in the master list description field for the menu and select find contains Catalogue No. Then it will ask you to enter the catalogue number you want to find. After you enter the number, press 'OK' or simply press enter.

# Show Subassembly Contents

Double click on any record in "**PINK**" and it will display the subassemblies attached to that record. Click on any record in "**GREEN**" and it will highlight the Subassembly list. Then by clicking "**New**" or double clicking, highlight a record, then right click and select "**Show Subassembly Contents**" a screen will appear showing the contents of the Subassembly.

## 💁 Show HTML Page

Double click on any record. By right clicking and selecting "**Show HTML Page**" information attached to that record will be displayed in an internet browser. Details on how to attach this information to any Master List record in the Master List Screen can be found in Section 8.2 of the Manual.

## 7.3.1 - 5 Access Menu

Right mouse click in "BLUE" area of the window to access menu.



#### 🗐 Swap Line

To reverse the position of two lines, select the lines and use this function to swap them about.

## Suppliers Enquiry

Select the required items in the list field. You can select individual items, blocks of items or by using Ctrl Key and clicking on various lines. Click on **"Suppliers Enquiry"**, a **"Report Destination"** screen will appear, select destination of the report, include "date required by".

## 📕 E-Mail Suppliers Enquiry

Select the required lines of information. These can be E-mailed directly from Fast Track using the inbuilt E-mail browser.

Click on "E-Mail Suppliers Enquiry", a box appears "E-mail Selected Lines" click "YES". After clicking this function the following screen will appear.

If as If that Links by System			
Senditive       Company       Part Name       Part Name       Part Name       Part Name       Part Name       Part Name       Company Name       All ackness       All ack	Fast Track Estimating System		
Send Hall       Eige Attach       T. Manual       Wew Attachment       Respiration       3 Medi       Protry       X Cancel         Name       Han Recipients List (Drag to & tro. Company       Name       Stockerts List       Name       BCC Recipients List         Attachments file name       File path name       Image: Stockerts List       Imag	Email Supplier Enquiry		_ 8 ×
Hame       Main Recipients List (Drag to & fro. Company       Hame       DC Recipients List         Image: Second state of the path name       Image: Second state of the path name       Image: Second state of the path name         Attachments file name       Image: Second state of the path name       Image: Second state of the path name       Image: Second state of the path name         Subject:-       Image: Second state of the path name       Image: Second state of the path name       Image: Second state of the path name         Subject:-       Image: Second state of the path name       Image: Second state of the path name       Image: Second state of the path name         Subject:-       Image: Second state of the path name       Image: Second state of the path name       Image: Second state of the path name         Subject:-       Image: Second state of the path name       Image: Second state of the path name       Image: Second state of the path name         Signature       C First Name C Last Name C Company Name       Image: Second state of the path name       Image: Second state of the path name         Signature       First Name       Company Name       E-Mail Address (Drag From)       Image: Second state of the path name	Send Mail Ref File T. Manual View Attachment	Reset All 3 Medi Priority X Can	cel ?
Attachments file name       File path name         Subject -	Name Main Recipients List (Drag to & fro Company	Name CC Recipients Lis	Name BCC Recipients List
Subject - Message Text  Signature  Signature  C Frist Name C Last Name C Company Name C Initials  A B C D E F G H I J K L M  D P Q R S T U V W X Y Z  Sumame Frist Name Company Name E-Mail Address (Drag From)	Attachments file name File path name		
Subject:- Message Text  Signature  Signature  C First Name C Last Name C Company Name C Initials  B C D E F G H I J K L M  D P Q R S T U V W X Y Z  Sumame  First Name Company Name E-Mail Address (Drag From)			×
Signature       First Name Company Name Company Name         Signature       First Name Company Name         Signature       NOPQRSTUVWXYZ	Subject:-		
Signature C First Name C Last Name C Company Name C Initials A B C D E F G H I J K L M N O P Q R S T U V W X Y Z Sumame First Name Company Name E-Mail Address (Drag From)	Message Text		
C First Name C Last Name C Company Name C Initials A B C D L T C H I J K L M N O P Q R S T U V W X Y Z Surname First Name Company Name E-Mail Address (Drag From)			
Surname First Name Company Name E-Mail Address (Drag From)	Signature	C First Name C Last Name C Company Name C Initials	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
	Surname First Name	Company Name E-Mail Address (D	rag From)
	-		

You can narrow the 'Address List' by clicking on the lettered tabs. You can now drag the address book recipients into the Main Recipient List, Carbon Copy or Blind Carbon Copy list shown above. You can drag recipients between each of the recipient lists.



you require a hard copy. The window will automatically close returning you to the Estimating Input window.

The recipient can view the E-Mail in any HTML browser, such as Internet Explorer. This document can also be opened in Microsoft Word or Microsoft Excel, or any other program that can open an HTML document. The document can then be edited by the recipient and emailed as an attachment back to the sender.

You can view the details of your E-mails under the 'Maintenance Menu' heading. (See Section 8.10 - Mail Log).

# X Add % to Selected Qty – Mat – Lab

Available in "Est Input - Sections" and "See All" screens only.

You can apply a percentage increase to selected lines in an estimate. The percentage can be applied to Labour Hours, Price or Quantities. For example, a section of work has a greater degree of difficulty because of a height factor, a 20% increase to the hourly rate is required to adjust that section to realistic hours making the estimate more accurate.

Highlight the required items, access the menu by a right click in "**BLUE**" section and select "**Add % to Selected Items**". A new window will appear on the screen asking for a figure to be placed in the field, e.g. 20 represents 20% (the maximum value is 100 and minimum is 2 decimal places.)

Labour, Material or Price can then be selected (labour is the default). Click "**OK**" and a 20% increase will be applied to the selected records.

## Word Replace

Highlight selected item, access menu and click "Word Replace". A new window "Replace Word with Another" appears. Type in change required, click "OK" to complete.

## Fill Down Sections

Available in "Est Input - Sections" and "See All" screens only. The Fill Down facility can be used to fill down the values selected in the first line to non-consecutive or consecutive selected lines.

For example, if you have a section that had to be changed, change the top most required line, highlight this record and all other lines required, right mouse click in blue area and select "**Fill Down Sections**". This applies to the rest of the "Fill Down" commands.

# Fill Down Description

Available in "Est Input - Sections" and "See All" screens only. Follow "Fill Down Sections" procedure.

## **\$** Fill Down Price

Available in "Est Input - Sections" and "See All" screens only. Follow "Fill Down Sections" procedure.

## Fill Down Discount

Available in "Est Input - Sections" and "See All" screens only. Follow "Fill Down Sections" procedure.

## Fill Down Labour Rates

Available in "Est Input - Sections" and "See All" screens only. Follow "Fill Down Sections" procedure.

## 💡 Fill Down Material Cost Centre

Available in "Est Input - Sections" and "See All" screens only. Follow "Fill Down Sections" procedure.

## Fill Down Labour Cost Centre

Select required line and click the "Edit" button. Tab across to the Labour Cost Centre field and type in Labour Cost Centre number then follow the "Fill Down Sections" procedure. Available in "See All" section only.

# Fill Down Labour Class

Available in "Est Input - Sections" and "See All" screens only. Follow "Fill Down Sections" procedure.

## Fill Down Area Code

Available in "Est Input - Sections" and "See All" screens only. Follow "Fill Down Sections" procedure.

#### Multiple Fill Down

?
Catalogue Number
Description
🗖 Unit
Cuantity
Price
Discount
Labour Rate
Material Cost Center
Labour Cost Center
Labour Classification
Work Area
Alternate Cost Center
Comment
Weight Onit
Surface Area Linit
Surface Area

Available in "Est Input - Sections" and "See All" screens only. Select required line and right click outside of the table, then the following screen will show up. You can select multiple columns to be fill down. It will fill down every item you checked.

## Import DDE

	Α	В	С	D	E	F	G	Н
1								
2	Catalogue No	Description	Unit	Quantity	Price \$	Dis%	Tax%	Labour Rate
3	HPM -1900CXVV	Outlet TV White Base	ea	12	28.62	20		0.3
4	6450 1 025-60	Patch Panel 24 Port RJ45 Cat 5	ea	333	261.6	5		0.5
5		* Cable Term 2C+E PVC PVC 16mm2		2	0	0		1
6	CABL-CAL16-6	~Termination 16mm2 cu CRIMP LUG	ea	8	1.22	30		2
7	CABL-CAL6-6	~Termination 6mm2 cu CRIMP LUG	ea	4	0.67	30		1.5
8	CRIT-0704	~Cable Marking Strip 10 Digit Critchey	ea	4	3.42	35		0.005

The system has a DDE (Dynamic Data Exchange) function. This means information can be imported into the current section of an estimate from an Excel spreadsheet called "Target.xls".

You must have an Microsoft Excel spreadsheet open along with the Excel file "Target.xls", and the columns lined up in the following order:-

Catalogue Number, Description, Unit, Quantity, Price, Discount, Tax, and Labour Rate.

Spreadsheets can be used for evaluation of light fitting prices or to access information received in spreadsheet format. The information can be organised into an area to act as a gateway for exchange. When this feature is used, the information is entered into the currently displayed section. The

procedure is designed to obtain information from the 3<sup>rd</sup> line downward in a spreadsheet until a blank description (line) is found, then it will terminate.

**Note:** Numeric fields in Excel must be displayed without "\$" signs, as the system see these as Alpha fields and the information is not imported.

## Proportionate

This function alters a selection of quantities by a related proportion. Highlight a selection of items, the first being the one controlling the proportion of change. Access menu, select "**Proportionate**", the procedure will alter the rest of the selected line based on the change of proportion of first line selected.

For example, by changing 10 to 20 the selected quantities are changed proportionately.

Sect	Catalogue Number	Description	Unit	Quantity	
10		* Cable Term 4C+E PVC PVC 10mm2		10.0	
10		* Cable Term 4C+E PVC PVC 10mm2		10.0	
10	SURE-LN25	~Brass Lock Nuts 25mm	ea	20.0	
10	SURE-SHR-3B	~Gland Acc Black Shrouds Size 3	ea	20.0	
10	SURE-GPHM25	~Glands GPHM25 Series	ea	20.0	
10	CABL-CT200ID/NT	"Cable Identification Tie 200*4.6 Nat	ea	20.0	
10	CABL-CAL4-5	~Cu Lug 4mm2 Cable 5mm Stud	ea	20.0	
10	CABL-CAL10-6	~Cu Lug 10mm2 Cable 6mm Stud	ea	80.0	

Right click Menu Change value in top record and " OK ", all other selected values are changed proportionately

Sect	Catalogue Number	Description	Unit	Quantity
10		* Cable Term 4C+E PVC PVC 10mm2		20.0
10		* Cable Term 4C+E PVC PVC 10mm2		20.0
10	SURE-LN25	"Brass Lock Nuts 25mm	ea	40.0
10	SURE-SHR-3B	~Gland Acc Black Shrouds Size 3	ea	40.0
10	SURE-GPHM25	~Glands GPHM25 Series	ea	40.0
10	CABL-CT200ID/NT	~Cable Identification Tie 200 *4.6 Nat	ea	40.0
10	CABL-CAL4-5	"Cu Lug 4mm2 Cable 5mm Stud	ea	40.0
10	CABL-CAL10-6	"Cu Lug 10mm2 Cable 6mm Stud	ea	160.0

# Paste from Clipboard

Any information than can be copied, for example, an Excel spreadsheet can be copied by highlighting and pasting directly into the description field of your selected estimate and section.

## Format Paste from Clipboard 4 Cols

You can copy items from clipboard and paste it to your estimating as using this button. This only applies from description to labour rate column.

## Copy Selected to Clipboard

You can copy any of selected items in the list to the clipboard with this function. This is useful to copy into none windows spread sheet. This does not copy formulas in this procedure.

You can edit information while in this screen, such as the Description, Unit, Quantity, Price, Discount, Weights and Area, this will be reflected in the Estimate. This feature can be used in both the "Est-Input Sections" and "Est-Input See All" screens.

#### 7.3.2 Estimate Input - See All

The "Estimate Input – See All" window displays the complete Estimate in section order. Alterations and additions to the estimate can be made as described in "Estimate Input > Sections".

timate Input Window								
t No Estimate Description 51 House Rewiring 50 Demo Estimate - Re wire city of 53 Trial for estimate datafile	Atlantis Closing Date 1 Sect 31 MAR 2011 1 2 25 DEC 2002 1 3 x v 10	No Alt No S	ection Descriptio (itchen Lounge room Main bedroom Switch Boards	n				Unit
Est Input - Sections Est Input	- See All Set Input - Price Book & Est Input - Count Est Inp Description	ut - Clip Board Unit	Quantity	Price \$ Dis%	Ext Price \$	Lab Rt	Ext Lab	Mat.C
					1	-		2
1	* Jin's Power Oulets		<u> </u>					
	Cable 4C+E PVCPVC 2.5mn 2	m	500.00	3.56 5.0	1,691.00	0.560	280.00	
OLEX-FNHC17AA0030MAA	Cable 3C+E PVC PVC Cir Cu 25mm2	M	700.00	8.37	5,859.00	0.072	50.40	
OLEX-GNHP07A10040MAA	Cable 4C+E PVC PVC Cir Cu 1kV 2.5mm2	M	100.00	1.61	161.00	0.048	4.80	1
	* Cable Term 2C+E PVC PVC 2.5mm2		5.00					
CABL-CT200ID/NT	~Cable Identification Tie 200*4.6 Nat	ea	10.00	0.60	6.00	0.100	1.00	
SURE-GPHM20B	~Glands GPHM20B Series	ea	10.00	8.00	80.00	0.200	2.00	
SURE-LN20	~Brass Lock Nuts 20mm	ea	10.00	1.85	18.50	0.012	0.12	
SURE-SHR-1B	~Gland Acc Black Shrouds Size 1	ea	10.00	3.80	38.00	0.012	0.12	
CABL-CAL2.5-5	~Cu Lug 2.5mm2 Cable 5mm Stud	ea	30.00	0.97	29.10	0.200	6.00	
	Cable Ladder 150mm SS Bend 90 Deg	ea	400.00	3.50	1,400.00	0.350	140.00	
SURE-GWPM4	Glands GWPM4 Series	ea	475.00	46.00	21,850.00	0.320	152.00	
	* Cable Term 2C+E PVC PVC 2.5mm2		5.00					
CABL-CT200ID/NT	~Cable Identification Tie 200*4.6 Nat	ea	10.00	0.60	6.00	0.100	1.00	
SURE-GPHM20B	~Glands GPHM20B Series	ea	10.00	8.00	80.00	0.200	2.00	
SURE-LN20	~Brass Lock Nuts 20mm	ea	10.00	1.85	18.50	0.012	0.12	
SURE-SHR-1B	~Gland Acc Black Shrouds Size 1	ea	10.00	3.80	38.00	0.012	0.12	
CABL-CAL2.5-5	~Cu Lug 2.5mm2 Cable 5mm Stud	ea	30.00	0.97	29.10	0.200	6.00	
	Cable Ladder 150mm SS Bend 90 Deg	ea	400.00	3.50	1,400.00	0.350	140.00	
SURE-GWPM4	Glands GWPM4 Series	ea	475.00	46.00	21,850.00	0.320	152.00	
	* Cable Term 2C+E PVC PVC 2.5mm2		5.00					
CABL-CT200ID/NT	~Cable Identification Tie 200*4.6 Nat	ea	10.00	0.60	6.00	0.100	1.00	
SURE-GPHM20B	~Glands GPHM20B Series	ea	10.00	8.00	80.00	0.200	2.00	
SURE-LN20	~Brass Lock Nuts 20mm	ea	10.00	1.85	18.50	0.012	0.12	
SURE-SHR-1B	~Gland Acc Black Shrouds Size 1	ea	10.00	3.80	38.00	0.012	0.12	
CABL-CAL2.5-5	~Cu Lug 2.5mm2 Cable 5mm Stud	ea	30.00	0.97	29.10	0.200	6.00	
	Cable Ladder 150mm SS Bend 90 Deg	ea	400.00	3.50	1,400.00	0.350	140.00	
SURE-GWPM4	Glands GWPM4 Series	ea	475.00	46.00	21,850.00	0.320	152.00	
				Material S	258 003 60	ah Hrs	3,552,61	

**Note:** All buttons operate as in "Estimate Input > Sections". **Other Functions** 

See "Estimate Input > Sections" for menu commands.



#### **Total Selected lines**

Highlight selected lines, click "calculator" button to bring up totals of labour and materials in the selected area.



Click this button, then it will ask you to enter the word you wish to search on in the description field to find.

#### 7.3.3 Estimate Input - Price Book

Information stored in the "**Price Book**", can be entered directly into the active Estimate from the display list. Items are entered into the Estimate mostly in units of 1, except where stated in the unit field.

Fast Track Estimating System										
File Edit Estimating Maintenance	Special Window Help									
	Charles Date		7 60		Casties D					
Est No Estimate Description	Closing Date		sec		Section D	escription		_		Unit
150 Demo Estimate - Re wire c	ity of Atlantis 25 DEC 2002	<b>_</b>			I ounge r	moom				
153 Trial for estimate datafile	iy of Additio				Main hed	room				
				0	Switch B	oards				lot
Est Input - Sections Est In	nput - See All 🚓 Est Input - Price Book 🕅 🎕 Est Inpu	ut - Cou	nt Est li	nput - Clip Boar	d 🖨 Est	timate Reports				
Manufacturers		Index					Vendors	Double	e Click)	
AFSM A F Smith		1900	A			100	910 A	CO Poh	vorete Ptv Ltd	
AOIP AOIP (NHP)		4	Adap	table Box Poly			125	demco	Auetralia Dh/ I td	
AC01 Aco Polycrete Pty Ltd		7	Aeria	Line Hardware			202	Ibert Ca	Australia Tiy Eto	II Divisian
ADEM Ademco Australia Ptv Ltd	-	6	Air Co	onditioners		-	303 A	aben Si	nun Group - Asto	
							150 A	mpac I	echnologies Ptv	
Catalogue No	Description		Unit	Trade Price\$	Pkg	Bulk Price\$	Ret Price\$	Dis%	Date	WUnt Wgt Com
NHP1-C90401	FSKD 234 OPERATOR CHAIR		EA	26080.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-OILDRUM20LT	OIL DRUM 20L		EA	210.00	0	0.00	0.00	0.00	1 JAN 2010	0.00 A
NHP1-THERMOSTATFORVA	STATORMATIC&VAPORMATIC THERMO.		EA	61.00	0	0.00	0.00	0.00	1 JAN 2010	0.00 A
NHP1-M8764	TAPTITE NO.10/32 X 10		EA	2.21	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-M8765	TAPTILE 10-32 X 3/4		EA	2.39	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-M0775	SPEED NUT 1/4-20		EA	740.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHD1 THE866	208 277/ 50 COI		EA	749.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-THE867	COIL 380 TO 500VAC		FA	749.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-OPRY	OPTN PCB HIT VWS3EA/EH VED		FA	580.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-M814LV	TIMER * REPLACED BY CG48TR		EA	470.00	0	0.00	0.00	0.00	1 JAN 2010	0.00 B
NHP1-OPE4M2	REMOTE OPER-ANALOG VFD VWS		EA	740.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-OPE4MJ2	REMOTE OPER-ANALOG VFD JSERIES		EA	740.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-OPE8M2	REMOTE OPER-ANALOG VFD VWS		EA	950.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-OPE8MJ2	REMOTE OPER-ANALOG VFD JSERIES		EA	950.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-M8X16HEX	SCREW M8 X 16MM HEXAGON HEAD		EA	2.10	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-OILBOTTLE500ML	OIL BOTTLE 500ML FULL		EA	27.80	0	0.00	0.00	0.00	1 JAN 2010	0.00 A
NHP1-OLF04200002	2400 CD RED OBS LIGHT 240V AC		EA	16610.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-ZS90SR10S10SVD	SWITCH LIMIT BELT DRIFT		EA	1200.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-DLA240AC2	ETA VEL OVERLAV E STOR		EA	455.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-CSLF1ESR NHP1-CSLF23ESD	FT1 TEL OVERLAT E STOP		EA	3.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1_CSI N1ESP	NT1 VELOVERLAY E STOP		FA	4 40	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-CSI N23ESB	NT2/NT3 YEL OVERLAY E STOP		FA	2 90	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-ZS90SR10S10S	SWITCH LIMIT BELT DRIFT		EA	1130.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-BS40027	BRAKING UNIT 27KW		EA	3560.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-BS40055	BRAKING UNIT 90KW		EA	6860.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
NHP1-BS400150	BRAKING UNIT 150KW		EA	26350.00	0	0.00	0.00	0.00	10 MAR 2011	0.00
×1 ·····	*				1	'				
C Catalogue No Exact Match										
💽 Catalogue No Near Match 🖉	a Add to Estimate 🔷									151
C Description Contains										
C Vendor + Cat No Near Match										
C Vendor + Description Contains										
Sec No Catalogue Number	Description			Un	it Qui	antity Price !	Dis% E	xt Price	S Lab Rt	Ext Lab Mat.CC
		in the second				ol ru +	 [	0		
NODNAB					?	Edit e	New All	Cano	Cer X OK	Close 1

Items can be found via the three drop down lists, "Manufactures", "Index" and "Vendors", or by using the "Search Type" function. The type of search can be specified in the drop down list.

By clicking on the Headed Lists (Catalogue No, Description, Price etc) you can sort in ascending or descending order in the various columns.

#### Search Type

- C Catalogue No Exact Match
- Catalogue No Near Match
- C Description Contains
- C Vendor + Cat No Near Match
- C Vendor + Description Contains

To find by catalogue number, select one of **Search Types** and click to find.

The procedure finds the closest match and redraws the window. The find is not always an exact match; the find function may locate an item with a similar catalogue number in another product line.



Once a record is found, select by clicking on the line, then the button "Add To Estimate". The item will be included in the Active Estimate and Section, once quantities have been added, press "OK".

Note: All buttons operate as in "Estimate Input - Sections".



Estimate Input Window			_ 8 ×
Est No Estimate Description	Closing Date 1 🗸 Sect No Section Description		
255 Training Estimate	30 DEC 2004 1 [Mains		
232 Rewire Atlantis City	10 NOV 2002 5 Submains		
231 Test estimate	25 DEC 2001 _ 10 ]Main Switchboard		-
Est Input - Sections Est Input - See All D Est Input - Price Book Est Input -	Count Est Input - Clip Board Strate Reports		
*Cable Term 1 Core PVC PVC 10mm2	Master Li	st A	
	* TE	RM CABLE 1C PVC PVC NYL	<b>_</b>
	Blac	k Steel Pines	
	CAB	LE ACCESS/TIES	
		IVEYOR EQUIPMENT	
	I I I I I I I I I I I I I I I I I I I	duit & Accessories	
		ONDULL FLEXIBLE CURRUGATED	
		ONDUIT PVC J BOXES	
		ONDUITS PVC HEAVY DUTY	<u> </u>
	Catalogue No Description	Unit Price \$Dis %	Lab Rt
	*Cable Term 1 Core PVC PVC 4mm2	Lot 0.01	0.010
	*Cable Term 1 Core PVC PVC 6mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC PVC 10mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC PVC 16mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC PVC 25mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC PVC 35mm2	Lot 0.01	0.001
	#Uable Term 1 Core PVC PVC SUmm2		0.001
	*Cable Term 1 Core PVC PVC 70mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC PVC 50mm2 #Cable Term 1 Core PVC PVC 120mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC PVC 120mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC PVC 185mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC 240mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC PVC 300mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC PVC 400mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC PVC 500mm2	Lot 0.01	0.001
	*Cable Term 1 Core PVC 630mm2	Lot 0.01	0.001
Count k		<u>s</u> 🗿 🖄 🖻	<u>ů</u>
	? 💁 Edit 責 New *	Ɓ│Cancel ×│_OK ✓	Close 📘

 $\diamond$ 

8

Clears the count list of its contents or dragging the unwanted line over the Clear button will also delete individual lines.

Prints the count list to printer or screen etc.



冒

For insertion of a non-Master List item into the count screen list.

Provides direct entry into the list for items, e.g. cable, where it is not practical to use the count button.



Click to turn the sound On and Off.

Sends the contents of the count screen list to the Active Estimate and Section.

Note: All buttons operate as in "Estimate Input – Sections".

The information contained in this window is "**memory only**", and could be lost by a power failure until transferred to the estimate.

## 7.3.5 Estimate Input – Clipboard

Estima	ate Input Wind	ow						
Est N	o Estimate	Description		Clo	sing Date 🛛 🔽	Sect No Section D	escription	
255	Training Rewire A	Estimate tlantis Citu		30 [	EC 2004	1 [Mains 5 Submains		<u> </u>
231	Test esti	mate		25 [	EC 2001 🗾 🧹	10 ]Main Swi	tchboard	<b>•</b>
Est Ir	nput - Sections	Est Input - See All	Est Input - Price Book	Est Input - Count	Est Input - Clip Boa	rd 🛃 Estimate Reports		
Clipboa	ard Contents			<		•		
								<u>×</u>
		2-14						<u>×</u>
Paste	from Clipboard	<u>}</u>						
Sec No (	Catalogue Number	Descr	ription		Unit Quantity	Price \$ Dis% Ext Price	\$ Lab Rt Ext Lab	<u>1at.CC Lab.CC Lab.C1 Area Alt</u>
				<b>a</b> l				sel are a listere 🗖 l
			1944 - E	3		Y 🖳 Edit 🛔	New Ta Lancel	

This function allows input of information into an Estimate via the Clipboard, e.g. from a spreadsheet, word document, internet, or generated from a scanner etc.

Copy information into the Clipboard, click "Paste from Clipboard", and the contents are copied into the large field.

Set the Estimate Number and Section Number by clicking "New" and entering the new information.

Highlight the text or figures by pressing the mouse button and dragging the hand along the text from Right to Left etc. Once highlighted, drag and drop the information into the appropriate field by pressing the mouse button on the highlighted text and holding.

The cursor can be dragged over the entry fields releasing the copy into a field. Complete by entering quantities or other information.

Click the "**OK**" button and the information is inserted in the estimate.

Note: All buttons operate as in "Estimate Input – Sections".

## 7.3.6 Estimate Input – Reports

🔵 Fast	t Tra	ck Estimating System										
File Ed	dit I	Estimating Maintenance Special Window Help										
Est	imat	e Input Window				_		7				B ×
Est	No	Estimate Description		Closing Date	1	~	Sect No	Alt No	Section	n Description	Unit	
15	1	House Rewiring Demo Estimate Re wire city of Atlantic		31 MAR 2011	-		1		Kitcher			
15	3	Trial for estimate datafile		20 000 2002			3	1	Main b	eroom		
1					-		10		Switch	Boards	lot	
Es	Est Ir tima	nput - Sections 📑 Est Input - See All 👼 Est Input ite Working's Reports	- Price Bo	ok 🕅 Est Inpu	t - Ci	ount	Est Input	- Clip Boa	ird 🎒 E	Estimate Reports		
		Print Estimate Workings 🚭	1							Schedule Workings 🚭		
		Workings and Summary 🚭	l							Schedule Summary 🔿		
-		Print Selected Section Only								Schedule- Single Line 🚭		
		Summary of Estimate Sections 🖨										
		Section Summary of Labour and Material 🖨								Estimate Workings Excel		
	5	Summary :- Section and Cost Center - Excel 🖭								Export Est workings as Delimited Tab file. 🎦		
		Cost and Alternative Centres Report 🖨										
		Customers Copy 📴										
		Labour and Material by Cost Centre 🏻 🎒	]							Summary of Estimate Reports		
	F	Print Summary of Workings by Cost Centres 🚑								Summary by Description 🎒		
	Prin	t Sum of Workings by Cost Center Front Sheet 👙								Summary by Catalogue No 🖨		
		Print Summary of Area Codes								Summary by Section 🚭		
	Pri	nt Summary of Workings by Alternate Cost Centres										
M	</td <td></td> <td>Î</td> <td></td> <td>Ē</td> <td>1</td> <td></td> <td></td> <td>5</td> <td>? 🕼 Edit 眚, New 浩 Cancel 🗙 OK 🗸</td> <td>Close</td> <td>e 🖸  </td>		Î		Ē	1			5	? 🕼 Edit 眚, New 浩 Cancel 🗙 OK 🗸	Close	e 🖸
-			terminal .	-	-	-						Contraction of the local division of the loc

The Estimate Report screen provides report options grouped under 3 headings. "Estimate Workings Reports"- "Schedule of Rates Reports" - "Summary of Estimate Reports".

Highlight the estimate required, click type of report required. A "**Destination Report**" screen will appear for selection of destination.

#### - Estimate Workings

Print Estimate Workings 🖨	This prints out the estimate workings including the labour and material but does not include the catalogue number.
Workings and Summary 🖨	This report joins the labour & Materials and the summary of sections together.
Print Selected Section Only 🖨	This will prints the selected section of the Estimate. A right mouse click will do the same report in Excel Report.
Summary of Estimate Sections 🖨	The button produces a summary of the Materials by Catalogue Number for each section on a separate page.
Section Summary of Labour and Material 🖨	This report gives the dollar value of Labour and Material As
the same report in Microsoft Excel.	

Summary :- Section and Cost Center - Excel 🚇

The Summary button opens Microsoft Excel and produces a report, by section, with each section being broken down into

This report gives the dollar value for Material and Hours

broken into Cost Centre and further split into Alternative Cost

Cost Centres. Labour hours are produced per Cost Centre along with selling prices being produced using the gang rate found in the section description. Selling prices are shown GST inclusive and GST exclusive.

This report will also produce subtotals by placing a "#" at the beginning of the field in the section description.

Cost and Alternative Centres Report 🎒

Centres.

Customers Copy 🚦 Labour rates. Report available in Microsof	This report can be presented to a Customer as a sectional break up. The report displays no Material Mark up or t Ecel with right click.
Labour and Material by Cost Centre	This report prints out the labour and Material workings based on the Cost Centres.
Print Summary of Workings by Cost Centres 🖨	This report prints out a summary of the working by cost centres.
Print Sum of Workings by Cost Center Front Sheet 🎒	This button will provide a Summary of Workings by CC Including Front Sheet.
Print Summary of Area Codes	This button will provide a report on the break up of Area Codes used in the Estimate.
Print Workings by Alternate Cost Centres 🖨	The button produces a report of workings by the Alternative Cost Centres
Print Summary of Workings by Alternate Cost Centres 🚑	The button produces a Summary of Workings by Alternative Cost Centres.

#### - Schedule of Rates Reports

Schedule Workings 🖨

This produces a schedule of rates showing all workings and a total for each section. And a grand total.

Schedule Summary 🎒

This produces a summary of the items in schedule and no workings. This report can also be produced in an Excel format by doing a right click.

Schedule-Single Line 🎒

This produces a single line schedule of rates, where every line in an estimate is priced using the Labour rate and Materia markup.

Estimate Workings Excel

The report can be generated into a Microsoft 'Excel' file already preformateed and page setups automatically done. Do modify any cells whilst data is being transported ito Excel.

Export Est workings as Delimited Tab file. 🎦

The Export button produces an Export file of the current Estimate, with all sections, to a nominated destination when prompted and named for the purpose of exporting the Estimate workings to an formatted Delimited Tab (.prn) file. This may assist the Project Manager on site. By doing a right mouse click on the button a report will be generated directly into an Excel Spreadsheet.

#### - Summary of Estimate Reports

#### Summary by Description 🎒

This prints a report based on a description summary. For example if you have 'Conduit in Slab' and Conduit Surface' they produce summary.

#### Summary by Catalogue No 🎒

This prints a report based on a catalogue number.

#### Summary by Section 🔿

This prints a report based on one page per section, summarised on description. Right click to add the Cost Centre to Description.

7

## 7.4 Duplicate Estimate Sections

Fast Track Estimating System  Fast Estimating Milinformer Constant Mindow Hole	
Duplicate Estimate Sections	_ 8 ×
Stimate From         Estimate Description           EstNo         Estimate Description	
1510     Latitude Description       153     Trial for estimate datafile       150     Demo Estimate - Re wire city of Attantis       151     House Rewiring       152     First Estimate	
Estimate Section From	
1       Interret Connection         3       Main bedroom         10       Lighting         20       IPower Outlets	
Quantities +     Prices +     Labour +	Close 📘

#### Operation

Create new sections in the estimate receiving the duplications, (refer "New Sections").

Top screens display current estimates, select required sections in both. The cursor becomes a hand when in the section screens, highlight the "Section Destination" required, click section required in "Estimate Section From", and drag across to the highlighted item, release to complete.



To duplicate the section without quantities, click "Quantities" button before duplicating section.



To duplicate the section without prices, click "Prices" button before duplicating section.



To duplicate the section without labour, click "Labour" button before duplicating section.

# Notes